

Speed zone « DZ-FZ »



« .180 » = remaining distance to the start of speed zone
« .48 » = current vehicle speed

« .450 » = remaining distance to the end of speed zone
« .29 » = current vehicle speed

Back to basic display:
HH:MM:SS
and battery, GPS & 4G status



Automatic triggering of a visual and audible alarm 200m before the start of a speed zone.
Continuous beep if the authorized speed is exceeded in the zone.